

How Do I Check Oil? 12RES

CHECKING OIL

The generator set is shipped with oil. Before operating the generator set, check the engine oil in the crankcase. (See below.)

Maintain the oil level at or near, not over, the full mark indicated by an "F" on the dipstick. Add 5W-30 synthetic oil when the oil level is low.

Check the oil level before each use. During extended operation, check the oil level every 8 hours. Do not check the oil level when the generator set is running. Shut down the generator set and wait several minutes before checking the oil.

